
SPENNARE Assembly Instruction

## Pop Up S10

Version (1x3 Curved)

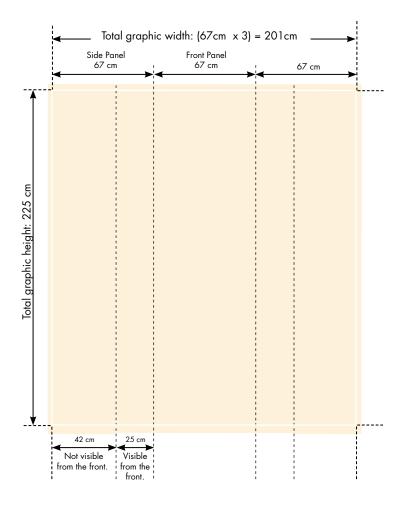

Dimensions 67 x 225cm x3


Available versions Curved: 1x3, 2x3, 3x3, 4x3, 5x3

Straight: 1x3, 2x3, 3x3, 4x3, 5x3


Assembly Magnetic locks, tapes, and guides.

(No tools required)

## Assembly Instruction

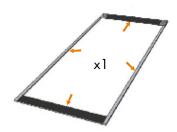

Front Panel: Start by mounting the provided top and bottom strips, according mage above. Then carefully mount the magnetic tape along the sides of the panels.

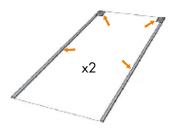

Side Panels: Mount the top corner strips on the side panels. Assembly the magnetic tapes in the same way as in previous step.



Mount the front panel according image above. It is easily guided and attached with the magnets in the top corners of the panel.



The side panels are assembled last in the same way as the others. Manually help curve the panels to easier get them in place (depending on print material).