SPENNARE Assembly Instruction

Pop Up S20

Version 3x3


Total graphic width: (67 cm x5) = 335 cmSide Panel Front Panel 67 cm 67 cm 67 cm 67 cm 67 cm Total graphic height: 220.5 cm 25 cm from the from the front. front.

Dimensions 67 x 220.5cm x5
Available versions Curved **3x3** and 4x3


Assembly Magnetic locks, tapes, and guides.

(No tools required)

Assembly Instruction

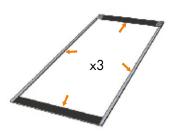

Front Panels: Start by mounting the provided top and bottom strips, according mage above. Then carefully mount the magnetic tape along the sides of the panels.

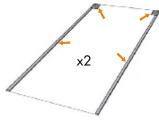

Side Panels: Mount the top corner strips on the side panels. Assembly the magnetic tapes in the same way as in previous step.



Mount the front panels according image above. They are easily guided and attached with the magnets in the top corners of each panel. For best result always start with the centre panel.



The side panels are assembled last in the same way as the others. Manually help curve the panels to easier get them in place (depending on print material).

