
SPENNARE Assembly Instruction

Pop Up S20


Version 4x3

Dimensions 67 x 220.5cm x6

Available versions Curved 3x3 and **4x3**Assembly Magnetic locks, tapes, and guides. (No tools required)

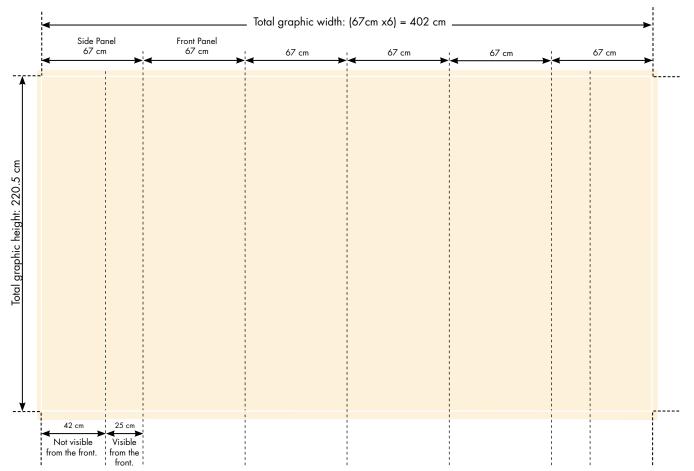


Assembly Instruction

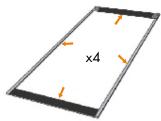

Front Panels: Start by mounting the provided top and bottom strips, according mage above. Then carefully mount the magnetic tape along the sides of the panels.



Mount the front panels according image above. They are easily guided and attached with the magnets in the top corners of each panel. For best result always start with the centre panel.

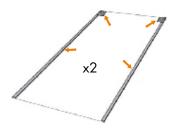

Side Panels: Mount the top corner strips on the side panels. Assembly the magnetic tapes in the same way as in previous step.



The side panels are assembled last in the same way as the others. Manually help curve the panels to easier get them in place (depending on print material).